

ENR 1.11 ADDRESSING OF FLIGHT PLAN MESSAGES

1 IFR Flight plan addressing

1.1 An IFR Flight Plan is to be addressed as follows (add all addresses that apply):

Route	Message Address
Flight wholly within the IFPS Zone (ENR 1.10 refers)	EUCHZMFP and EUCBZMFP or use IFPS collective address EGZYIFPS
Within the Shanwick OCA and FIR	EUCHZMFP and EUCBZMFP
Flights which will transit the SOTA	EUCHZMFP and EUCBZMFP
Flights which will transit the BOT A	LFRRZQZX
Flights requiring a service from Swanwick Military	EGZYOATT
Flight or part of flight outside the IFPS Zone	As detailed in the AIP of the State or country flown through – see note.

2 Mixed IFR/VFR Flight plan addressing

2.1 The IFR portion of a mixed mode (IFR/VFR) Flight Plan is to be addressed as per the table above; the VFR portion is to be addressed as per the guidance below.

3 VFR Flight plan addressing

3.1 A VFR Flight Plan is to be addressed to the Departure and Destination aerodrome (ICAO Location Indicator + ZTZX) plus any additional addresses as specified in the tables below (add all addresses that apply):

Aerodrome	Requirement
EGAC (Belfast/City)	Add EGAAZPZX (Aldergrove ARO)
EGBE (Coventry)	Add EGBBZTZ (Birmingham Approach)
EGFF (Cardiff)	Add EGFFZIZF (for VFR departures from Cardiff and VFR flight plans requiring onward transmission)
EGHH (Bournemouth)	Add EGHIZTZ (Southampton Zone)
EGLC (London/City)	Add EGLCZGZX and EGLCZPZX ONLY (ZTZX not required)
EGLK (Blackbushe)	Add EGLFZTZ (Farnborough ATC)
EGMH (Manston)	Add EGMHZPZO
EGPB (Sumburgh) and any other Shetland Isles aerodrome/destination	Add EGPDZTZ
EGPH (Edinburgh)	Add EGPHZGZX
EGTF (Fairoaks)	Add EGLFZTZ

Route	Address
Entering or remaining within Scottish FIR	EGZVFRP
Entering or remaining within London FIR	EGZVVRT
Within the Shanwick OCA and FIR	EGGXZQZX
Entering or remaining within Channel Islands CTR or CTAs	EGJJZRZX
Entering any Aberdeen ATSU Off-shore Area of Responsibility (shown at ENR 6-1-15-1)	EGPDZTZ
Any flight or portion of flight through a non UK FIR (eg Cross Channel flight)	As detailed in the AIP of the State or country flown through – see note.

Note: AIPs for all Eurocontrol states can be downloaded free of charge from the Eurocontrol Website at: <http://www.ead.eurocontrol.int/eadcms/eadsite/index.php.html>

INTENTIONALLY BLANK