


INSTRUMENT APPROACH CHART - ICAO PLAN VIEW SCALE: 1:350 000

SANDANE

ANDA


RNAV_(GNSS) RWY 09TRANSITION ALTITUDE
6000

AFIS: 119.800	AERODROME ELEVATION: 196 FT	
VDF: 119.800	THR ELEVATION: 174 FT	DIST IN NM
	HGT RELATED TO THR RWY 09	ELEV, ALT AND HGT IN FT
	CIRCLING HGT RELATED TO AD ELEV	
	BEARINGS ARE MAGNETIC - VAR 0.6 ° E (2015)	

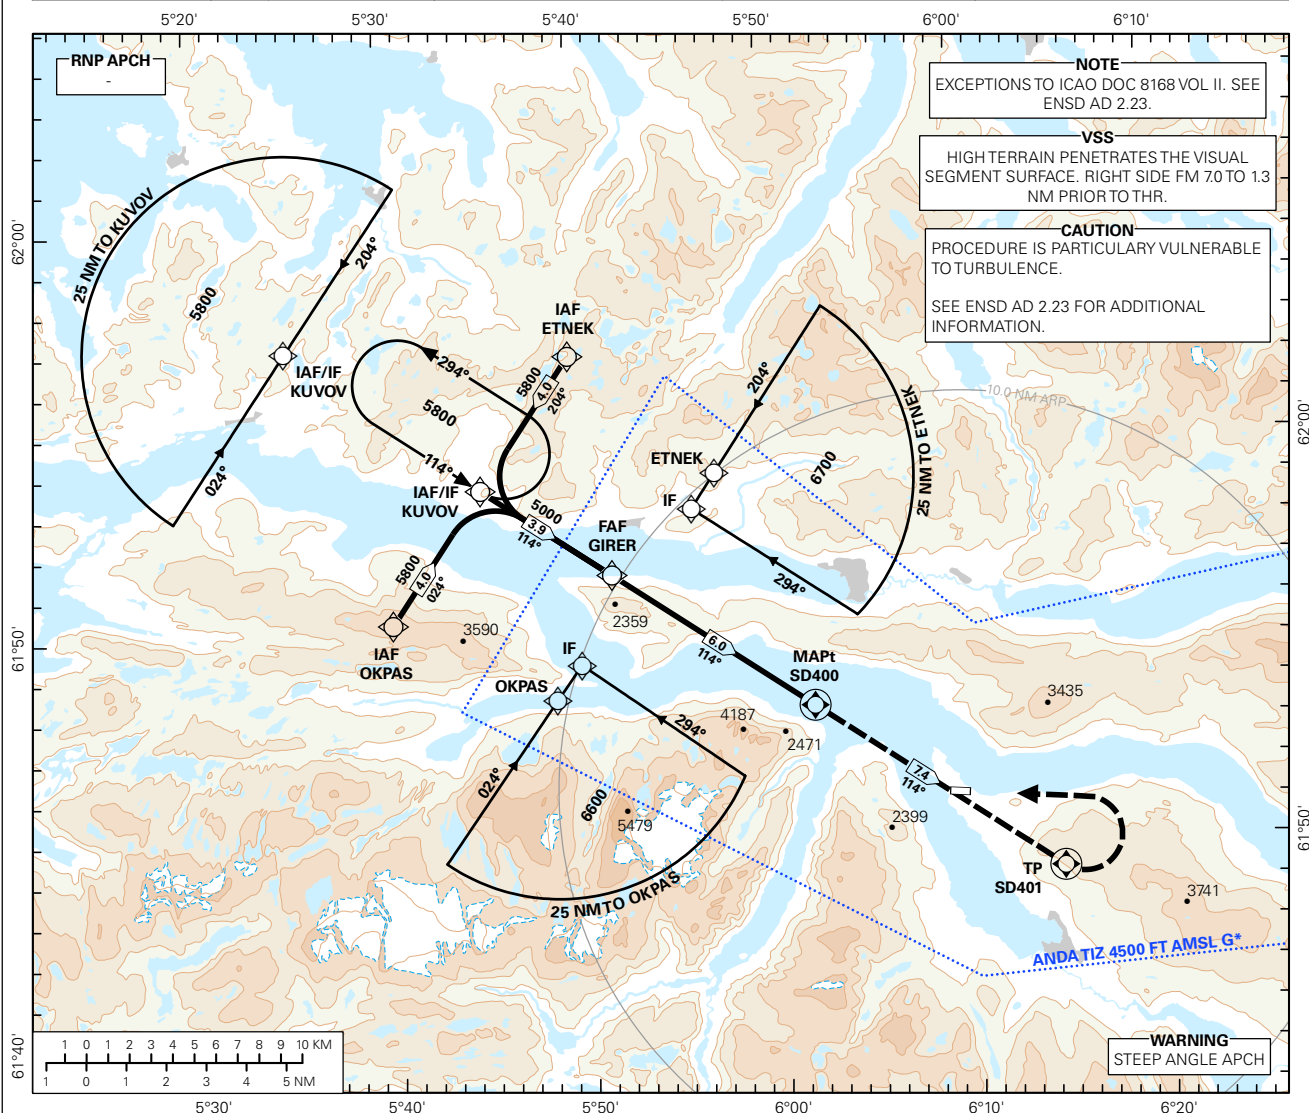

DIST TO SD400	8	7	6	5	4	3	2	1
ALT (HGT)	-	-	5000 (4826)	4520 (4346)	4050 (3876)	3570 (3396)	3090 (2916)	2610 (2436)

PROCEDURE OFFSET: 30°

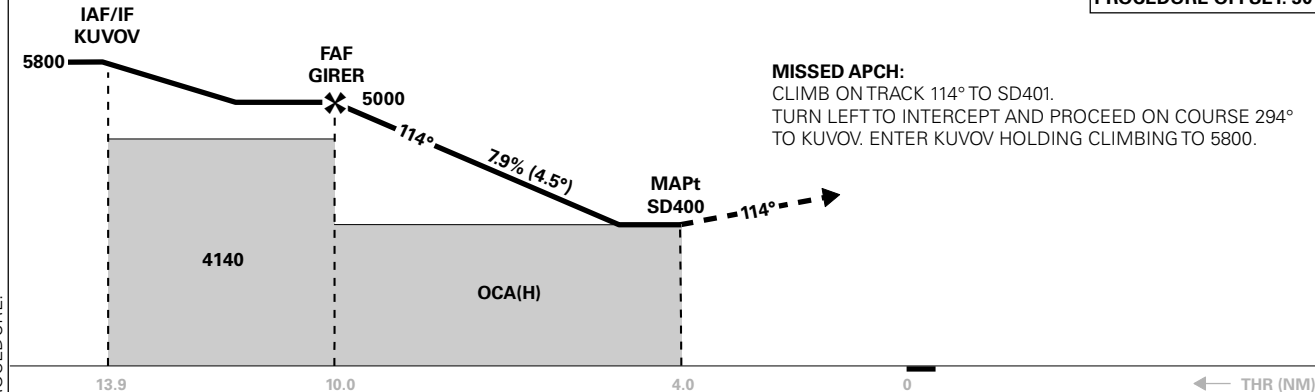

CAT OF ACFT	A	B	C	D	FINAL APPROACH	DIST FM FAF - SD400: 6.0 NM					
OCA(H)	2520 (2346)	-	-	-	SPEED	KT	70	90	100	120	130
STRAIGHT - IN	-	-	-	-	TIME	MIN:SEC	05:10	04:01	03:37	03:01	02:47
CIRCLING	2520 (2324)	3600 (3404)	-	-	ROD	FT/MIN	555	715	795	955	1035

NOTE: CIRCLING N OF AD ONLY.

CHANGES: NEW PROCEDURE.

Avinor

13 NOV 2014

RECOMMENDED RNAV PROCEDURE CODING

ENSD RNAV(GNSS) RWY 09										
Serial Number	Path Descriptor	Waypoint Identifier	Fly-over	Course °M(°T)	MAG VAR	DIST (NM)	Turn Dir	ALT (FT)	Speed (KT)	VPA/TCH
010	IF	ETNEK	-	-	-	-	-	A6700+	-	-
020	TF	KUVOV	-	204 (204.5)	-	4.0	-	A5800+	-	-
010	IF	OKPAS	-	-	-	-	-	A6600+	-	-
020	TF	KUVOV	-	024 (024.4)	-	4.0	-	A5800+	-	-
010	IF	KUVOV	-	-	-	-	-	A5800+	-	-
020	TF	GIRER	-	114 (114.1)	-	3.9	-	A5000+	-	-
030	TF	SD400	Y	114 (114.3)	-	6.0	-	-	-	-
040	TF	SD401	Y	114 (114.4)	-	7.4	-	-	-	-
050	CF	KUVOV	-	294 (294.4)	-	-	L	A5800	-	-
060	HM	KUVOV	-	114 (114.2)	-	1 MIN	L	A5800	-	-

Note: Recommended RNAV procedure coding is provided solely to indicate which procedure design protection areas were used in the Instrument Flight Procedure Design process.

Note: KUVOV holding not included in standard APCH transitions.